


平頭鎖安裝說明書

INSTALLATION INSTRUCTION

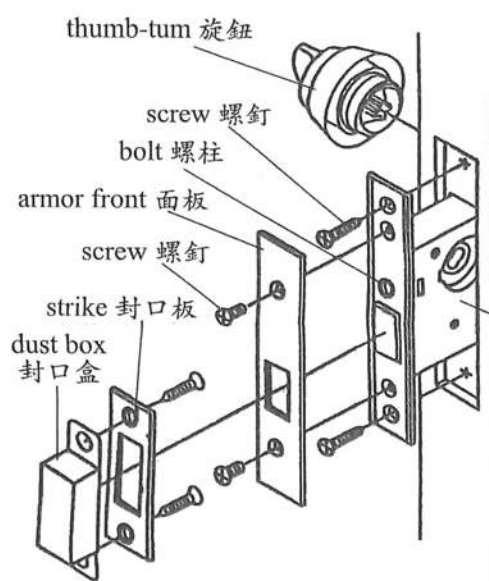

1. 按安裝紙規在門上開孔。
2. 安裝鎖匣: 先將面板拆下, 將鎖匣裝入開好的孔內, 擰緊螺釘。
3. 安裝鎖頭、旋鈕及面板。
用螺絲刀逆時針旋轉螺柱至盡頭, 旋入鎖頭及旋鈕。
(將商標字樣置于12點鐘位置), 用螺絲刀順時針旋
緊螺柱, 使鎖頭、旋鈕不能轉動。蓋上面板, 擰緊螺釘。
4. 根據四角舌位置及封口盒、封口板尺寸在門框上開孔。
5. 安裝封口盒及封口板。

1. Bore holes according to the template.
2. Install the casket: Screw off the armor front, install the casket into the holes and. Tighten the screws.
3. Screw the bolt off, install the cylinder & thumb-turn (the trade mark must be upright). Then tighten the bolt and screw on the armor front.
4. Bore holes according to the position of latch, dust box and strike.
5. Install strike and dust box.

